Configuring DECnet Services

Router Software Version 11.0
Site Manager Software Version 5.0

Part No. 114050 Rev. A
August 1996

Bay Networks

Bay Networks

4401 Great America Parkway
Santa Clara, CA 95054

8 Federal Street
Billerica, MA 01821

Copyright © 1988–1996 Bay Networks, Inc.

All rights reserved. Printed in the USA. August 1996.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Bay Networks, Inc.

The software described in this document is furnished under a license agreement and may only be used in accordance with the terms of that license. A summary of the Software License is included in this document.

Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notice for All Other Executive Agencies

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Trademarks of Bay Networks, Inc.

ACE, AFN, AN, BCN, BLN, BN, BNX, CN, FN, FRE, GAME, LN, Optivity, PPX, SynOptics, SynOptics Communications, Wellfleet and the Wellfleet logo are registered trademarks and ANH, ASN, Bay•SIS, BCNX, BLNX, EZ Install, EZ Internetwork, EZ LAN, PathMan, PhonePlus, Quick2Config, RouterMan, SPEX, Bay Networks, Bay Networks Press, the Bay Networks logo and the SynOptics logo are trademarks of Bay Networks, Inc.

Third-Party Trademarks

All other trademarks and registered trademarks are the property of their respective owners.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Bay Networks, Inc. reserves the right to make changes to the products described in this document without notice.

Bay Networks, Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product are Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Bay Networks Software License

Note: This is Bay Networks basic license document. In the absence of a software license agreement specifying varying terms, this license -- or the license included with the particular product -- shall govern licensee's use of Bay Networks software.

This Software License shall govern the licensing of all software provided to licensee by Bay Networks ("Software"). Bay Networks will provide licensee with Software in machine-readable form and related documentation ("Documentation"). The Software provided under this license is proprietary to Bay Networks and to third parties from whom Bay Networks has acquired license rights. Bay Networks will not grant any Software license whatsoever, either explicitly or implicitly, except by acceptance of an order for either Software or for a Bay Networks product ("Equipment") that is packaged with Software. Each such license is subject to the following restrictions:

1. Upon delivery of the Software, Bay Networks grants to licensee a personal, nontransferable, nonexclusive license to use the Software with the Equipment with which or for which it was originally acquired, including use at any of licensee's facilities to which the Equipment may be transferred, for the useful life of the Equipment unless earlier terminated by default or cancellation. Use of the Software shall be limited to such Equipment and to such facility. Software which is licensed for use on hardware not offered by Bay Networks is not subject to restricted use on any Equipment, however, unless otherwise specified on the Documentation, each licensed copy of such Software may only be installed on one hardware item at any time.
2. Licensee may use the Software with backup Equipment only if the Equipment with which or for which it was acquired is inoperative.
3. Licensee may make a single copy of the Software (but not firmware) for safekeeping (archives) or backup purposes.
4. Licensee may modify Software (but not firmware), or combine it with other software, subject to the provision that those portions of the resulting software which incorporate Software are subject to the restrictions of this license. Licensee shall not make the resulting software available for use by any third party.
5. Neither title nor ownership to Software passes to licensee.
6. Licensee shall not provide, or otherwise make available, any Software, in whole or in part, in any form, to any third party. Third parties do not include consultants, subcontractors, or agents of licensee who have licensee's permission to use the Software at licensee's facility, and who have agreed in writing to use the Software only in accordance with the restrictions of this license.
7. Third-party owners from whom Bay Networks has acquired license rights to software that is incorporated into Bay Networks products shall have the right to enforce the provisions of this license against licensee.
8. Licensee shall not remove or obscure any copyright, patent, trademark, trade secret, or similar intellectual property or restricted rights notice within or affixed to any Software and shall reproduce and affix such notice on any backup copy of Software or copies of software resulting from modification or combination performed by licensee as permitted by this license.

Bay Networks Software License *(continued)*

9. Licensee shall not reverse assemble, reverse compile, or in any way reverse engineer the Software. [Note: For licensees in the European Community, the Software Directive dated 14 May 1991 (as may be amended from time to time) shall apply for interoperability purposes. Licensee must notify Bay Networks in writing of any such intended examination of the Software and Bay Networks may provide review and assistance.]
10. Notwithstanding any foregoing terms to the contrary, if licensee licenses the Bay Networks product "Site Manager," licensee may duplicate and install the Site Manager product as specified in the Documentation. This right is granted solely as necessary for use of Site Manager on hardware installed with licensee's network.
11. This license will automatically terminate upon improper handling of Software, such as by disclosure, or Bay Networks may terminate this license by written notice to licensee if licensee fails to comply with any of the material provisions of this license and fails to cure such failure within thirty (30) days after the receipt of written notice from Bay Networks. Upon termination of this license, licensee shall discontinue all use of the Software and return the Software and Documentation, including all copies, to Bay Networks.
12. Licensee's obligations under this license shall survive expiration or termination of this license.

Contents

Configuring DECnet Services

About This Guide

Before You Begin xiii
Conventions xiv
Acronyms xv
Ordering Bay Networks Publications xv

Technical Support and Online Services

Bay Networks Customer Service xviii
Bay Networks Information Services xix
World Wide Web xix
Customer Service FTP xix
Support Source CD xx
CompuServe xx
InfoFACTS xxi
How to Get Help xxi

Chapter 1
DECnet Overview

DECnet Network Organization 1-1
DECnet Phase IV Organization 1-1
DECnet Phase V Organization 1-3
Routing DECnet Packets across the Network 1-4
The Routing Process 1-5
Update Process 1-5
Listening Process 1-6
Decision Process 1-6
Forwarding Process 1-8
The Designated Router 1-9

DECnet IV to V Transition 1-10
Translating DECnet Addresses 1-10
Translating Data Packets 1-11
Phase IV to Phase V 1-12
Phase V to Phase IV 1-12
Advertising Routes 1-13
DECnet IV to V Basic Transition Strategy 1-13
Static Routes 1-14
Static Adjacency Support 1-16
For More Information 1-19

Chapter 2
Enabling DECnet Services

Enabling DECnet Phase IV on an Interface 2-2

Chapter 3
Editing DECnet Parameters

Accessing DECnet Parameters 3-2
Editing DECnet Global Parameters 3-3
DECnet Global Parameter Descriptions 3-4
Editing DECnet Interface Parameters 3-9
DECnet Interface Parameter Descriptions 3-11
Configuring Static Routes 3-18
Adding a Static Route 3-18
DECnet Static Route Parameter Descriptions 3-19
Editing Static Route Parameters 3-23
Deleting a Static Route 3-23
Configuring Static Adjacencies 3-23
Adding a Static Adjacency 3-24
DECnet Static Adjacency Parameter Descriptions 3-27
Editing Static Adjacency Parameters 3-29
Deleting a Static Adjacency 3-30
Configuring the DECnet IV to V Transition 3-30
Creating the DECnet IV to V Transition 3-31
DECnet IV to V Transition Parameter Descriptions 3-31
Editing the DECnet IV to V Transition Parameters 3-33

Deleting the DECnet IV to V Transition 3-33
Deleting DECnet from the Router 3-34

Appendix A
DECnet Parameter Default Settings

Index

Figures

Figure 1-1. DECnet Phase IV Address 1-2
Figure 1-2. Bay Networks Router with Multiple DECnet Addresses 1-3
Figure 1-3. Calculating the Least-Cost Path 1-6
Figure 1-4. Least-Cost Path to a Destination 1-8
Figure 1-5. DECnet Phase IV to Phase V Address Mapping 1-11
Figure 1-6. Translation of a DECnet Phase IV Data Packet to a Phase V CLNP Packet 1-12
Figure 1-7. Static Routes Defined for Routers Residing in Different Areas 1-15
Figure 1-8. Static Adjacencies Defined for Routers Residing in the Same Area 1-17
Figure 1-9. Static Adjacencies Defined for Routers Residing in Different Areas 1-18
Figure 2-1. DECnet IV Configuration Window 2-2
Figure 3-1. Configuration Manager Window 3-2
Figure 3-2. Edit DECnet Global Parameters Window 3-3
Figure 3-3. DECnet IV Interface List Window 3-10
Figure 3-4. DECnet Static Routes List Window 3-18
Figure 3-5. DECnet Static Routes Configuration Window 3-19
Figure 3-6. Circuit List Window 3-24
Figure 3-7. Circuit Definition Window 3-25
Figure 3-8. DECnet Static Adjacent Hosts List Window 3-26
Figure 3-9. DECnet Static Adjacency Configuration Window 3-26
Figure 3-10. Create DECnet IV to V Transition Parameters Window 3-31

Tables

Table 1-1. Router Forwarding Based on the Destination Address in the Packet Header 1-9
Table A-1. DECnet Phase IV Global Parameters A-1
Table A-2. DECnet Phase IV Interface Parameters A-2
Table A-3. DECnet Static Route Parameters A-2
Table A-4. DECnet Static Adjacency Parameters A-3
Table A-5. DECnet IV to V Transition Parameters A-3

About This Guide

If you are responsible for configuring Bay Networks™ router software for DECnet services, you need to read this guide. It explains

- How DECnet services work (Chapter 1)
- How you configure a DECnet interface (Chapter 2)
- How to edit DECnet global and interface parameters and configure static routes, static adjacencies, and the DECnet IV to V Transition (Chapter 3)

Before You Begin

Before using this guide, you must complete the following procedures. For a new router:

- Install the router (refer to the installation manual that came with your router).
- Connect the router to the network and create a pilot configuration file (refer to *Quick-Starting Routers and BNX Platforms*, *Connecting BayStack AN and ANH Systems to a Network*, or *Connecting ASN Routers and BNX Platforms to a Network*).
- Create and save a configuration file that has at least one DECnet interface (refer to *Configuring Routers* for instructions).
- Retrieve the configuration file in local, remote, or dynamic mode (refer to *Configuring Routers* for instructions).

Make sure that you are running the latest version of Bay Networks Site Manager and router software. For instructions, refer to *Upgrading Routers from Version 7–10.xx to Version 11.0*.

Conventions

bold text	Indicates text that you need to enter, command names, and buttons in menu paths. Example: Enter **wfsm &**
	Example: Use the **dinfo** command.
	Example: ATM DXI > Interfaces > **PVCs** identifies the PVCs button in the window that appears when you select the Interfaces option from the ATM DXI menu.
italic text	Indicates variable values in command syntax descriptions, new terms, file and directory names, and book titles.
quotation marks (“ ”)	Indicate the title of a chapter or section within a book.
`screen text`	Indicates data that appears on the screen. Example: `Set Bay Networks Trap Monitor Filters`
separator (>)	Separates menu and option names in instructions and internal pin-to-pin wire connections. Example: Protocols > AppleTalk identifies the AppleTalk option in the Protocols menu.
	Example: Pin 7 > 19 > 20
vertical line (|)	Indicates that you enter only one of the parts of the command. The vertical line separates choices. Do not type the vertical line when entering the command. Example: If the command syntax is
	show at routes | **nets**, you enter either **show at routes** or **show at nets**, but not both.

Acronyms

AFI	authority format identifier
CLNP	Connectionless Network Protocol
DSP	Domain Specific Part
ES-IS	End System to Intermediate System
IDI	Initial Domain Identifier
IDP	Initial Domain Part
IS-IS	Intermediate System to Intermediate System
MAC	media access control
MIB	Management Information Base
NSAP	Network Service Access Point
OSI	Open Systems Interconnection
SMDS	Switched Multimegabit Data Services
WAN	wide area network

Ordering Bay Networks Publications

To purchase additional copies of this document or other Bay Networks publications, order by part number from the Bay Networks Press™ at the following telephone or fax numbers:

- Telephone - U.S./Canada 1-888-4BAYPRESS
- Telephone - International 1-510-490-4752
- Fax 1-510-498-2609

You can also use these numbers to request a free catalog of Bay Networks Press product publications.

Technical Support and Online Services

To ensure comprehensive network support to our customers and partners worldwide, Bay Networks Customer Service has Technical Response Centers in key locations around the globe:

- Billerica, Massachusetts
- Santa Clara, California
- Sydney, Australia
- Tokyo, Japan
- Valbonne, France

The Technical Response Centers are connected via a redundant Frame Relay Network to a Common Problem Resolution system, enabling them to transmit and share information, and to provide live, around-the-clock support 365 days a year.

Bay Networks Information Services complement the Bay Networks Service program portfolio by giving customers and partners access to the most current technical and support information through a choice of access/retrieval means. These include the World Wide Web, CompuServe, Support Source CD, Customer Support FTP, and InfoFACTS document fax service.

Bay Networks Customer Service

If you purchased your Bay Networks product from a distributor or authorized reseller, contact that distributor's or reseller's technical support staff for assistance with installation, configuration, troubleshooting, or integration issues.

Customers can also purchase direct support from Bay Networks through a variety of service programs. As part of our PhonePlus™ program, Bay Networks Service sets the industry standard, with 24-hour, 7-days-a-week telephone support available worldwide at no extra cost. Our complete range of contract and noncontract services also includes equipment staging and integration, installation support, on-site services, and replacement parts delivery -- within approximately 4 hours.

To purchase any of the Bay Networks support programs, or if you have questions on program features, use the following numbers:

Region	Telephone Number	Fax Number
United States and Canada	1-800-2LANWAN; enter Express Routing Code (ERC) 290 when prompted (508) 436-8880 (direct)	(508) 670-8766
Europe	(33) 92-968-300	(33) 92-968-301
Asia/Pacific Region	(612) 9927-8800	(612) 9927-8811
Latin America	(407) 997-1713	(407) 997-1714

In addition, you can receive information on support programs from your local Bay Networks field sales office, or purchase Bay Networks support directly from your authorized partner.

Bay Networks Information Services

Bay Networks Information Services provide up-to-date support information as a first-line resource for network administration, expansion, and maintenance. This information is available from a variety of sources.

World Wide Web

The Bay Networks Customer Support Web Server offers a diverse library of technical documents, software agents, and other important technical information to Bay Networks customers and partners.

A special benefit for contracted customers and resellers is the ability to access the Web Server to perform Case Management. This feature enables your support staff to interact directly with the network experts in our worldwide Technical Response Centers. A registered contact with a valid Site ID can

- View a listing of support cases and determine the current status of any open case. Case history data includes severity designation, and telephone, e-mail, or other logs associated with the case.
- Customize the listing of cases according to a variety of criteria, including date, severity, status, and case ID.
- Log notes to existing open cases.
- Create new cases for rapid, efficient handling of noncritical network situations.
- Communicate directly via e-mail with the specific technical resources assigned to your case.

The Bay Networks URL is *http://www.baynetworks.com*. Customer Service is a menu item on that home page.

Customer Service FTP

Accessible via URL *ftp://support.baynetworks.com* (134.177.3.26), this site combines and organizes support files and documentation from across the Bay Networks product suite, including switching products from our Centillion™ and Xylogics® business units. Central management and sponsorship of this FTP site lets you quickly locate information on any of your Bay Networks products.

Support Source CD

This CD-ROM -- sent quarterly to all contracted customers -- is a complete Bay Networks Service troubleshooting knowledge database with an intelligent text search engine.

The Support Source CD contains extracts from our problem-tracking database; information from the Bay Networks Forum on CompuServe; comprehensive technical documentation, such as Customer Support Bulletins, Release Notes, software patches and fixes; and complete information on all Bay Networks Service programs.

You can run a single version on Macintosh Windows 3.1, Windows 95, Windows NT, DOS, or UNIX computing platforms. A Web links feature enables you to go directly from the CD to various Bay Networks Web pages.

CompuServe

For assistance with noncritical network support issues, Bay Networks Information Services maintain an active forum on CompuServe, a global bulletin-board system. This forum provides file services, technology conferences, and a message section to get assistance from other users.

The message section is monitored by Bay Networks engineers, who provide assistance wherever possible. Customers and resellers holding Bay Networks service contracts also have access to special libraries for advanced levels of support documentation and software. To take advantage of CompuServe's recently enhanced menu options, the Bay Networks Forum has been re-engineered to allow links to our Web sites and FTP sites.

We recommend the use of CompuServe Information Manager software to access these Bay Networks Information Services resources. To open an account and receive a local dial-up number in the United States, call CompuServe at 1-800-524-3388. Outside the United States, call 1-614-529-1349, or your nearest CompuServe office. Ask for Representative No. 591. When you are on line with your CompuServe account, you can reach us with the command **GO BAYNET**.

InfoFACTS

InfoFACTS is the Bay Networks free 24-hour fax-on-demand service. This automated system has libraries of technical and product documents designed to help you manage and troubleshoot your Bay Networks products. The system responds to a fax from the caller or to a third party within minutes of being accessed.

To use InfoFACTS in the United States or Canada, call toll-free 1-800-786-3228. Outside North America, toll calls can be made to 1-408-764-1002. In Europe, toll-free numbers are also available for contacting both InfoFACTS and CompuServe. Please check our Web page for the listing in your country.

How to Get Help

Use the following numbers to reach your Bay Networks Technical Response Center:

Technical Response Center	Telephone Number	Fax Number
Billerica, MA	1-800-2LANWAN	(508) 670-8765
Santa Clara, CA	1-800-2LANWAN	(408) 764-1188
Valbonne, France	(33) 92-968-968	(33) 92-966-998
Sydney, Australia	(612) 9927-8800	(612) 9927-8811
Tokyo, Japan	(81) 3-5402-0180	(81) 3-5402-0173

Chapter 1
DECnet Overview

This chapter shows how Bay Networks router software works with DECnet services and describes the

- Organization of end nodes and routers in a DECnet network
- Transmission of messages from the Bay Networks router through the DECnet network
- Routing decision process for a DECnet network
- DECnet IV to V Transition feature
- Purpose of static routes
- Static adjacency support

DECnet Network Organization

A DECnet network contains two types of nodes: end nodes and routers. End nodes send and receive messages. Routers transmit messages to end nodes and other routers on the network.

DECnet Phase IV Organization

DECnet Phase IV is a networking protocol that supports large networks (up to approximately 64,000 nodes). You can divide each network into as many as 63 distinct areas; each area contains up to 1023 nodes. You must assign to each area an Area ID, unique to the network. You must also assign to each node within an area a Node ID, unique to the area.

Together, the Area ID and Node ID form a 16-bit DECnet Phase IV address (Figure 1-1). The first 6 bits identify the area in which the node resides; the last 10 bits identify the node itself. Each DECnet Phase IV address must be unique within the network.

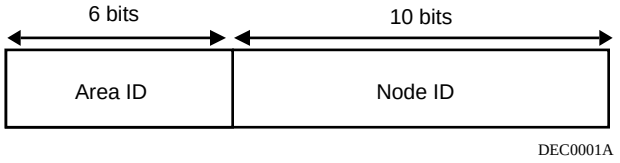

Figure 1-1. DECnet Phase IV Address

A Bay Networks router running the routing software for a DECnet Phase IV network can service multiple areas; that is, you can assign a DECnet Phase IV address to each of the router's individual interfaces, rather than to the entire router. For example, if a router resides in multiple areas (has circuits connecting to more than one area), you assign an Area ID and Node ID for each area to which it connects. A router can also have several interfaces (each one with a unique Node ID) in the same area.

In Figure 1-2, circuits E21 and E22 have different DECnet addresses, even though they connect to the same router. Note that each circuit's address is still unique within its area and within the DECnet network.

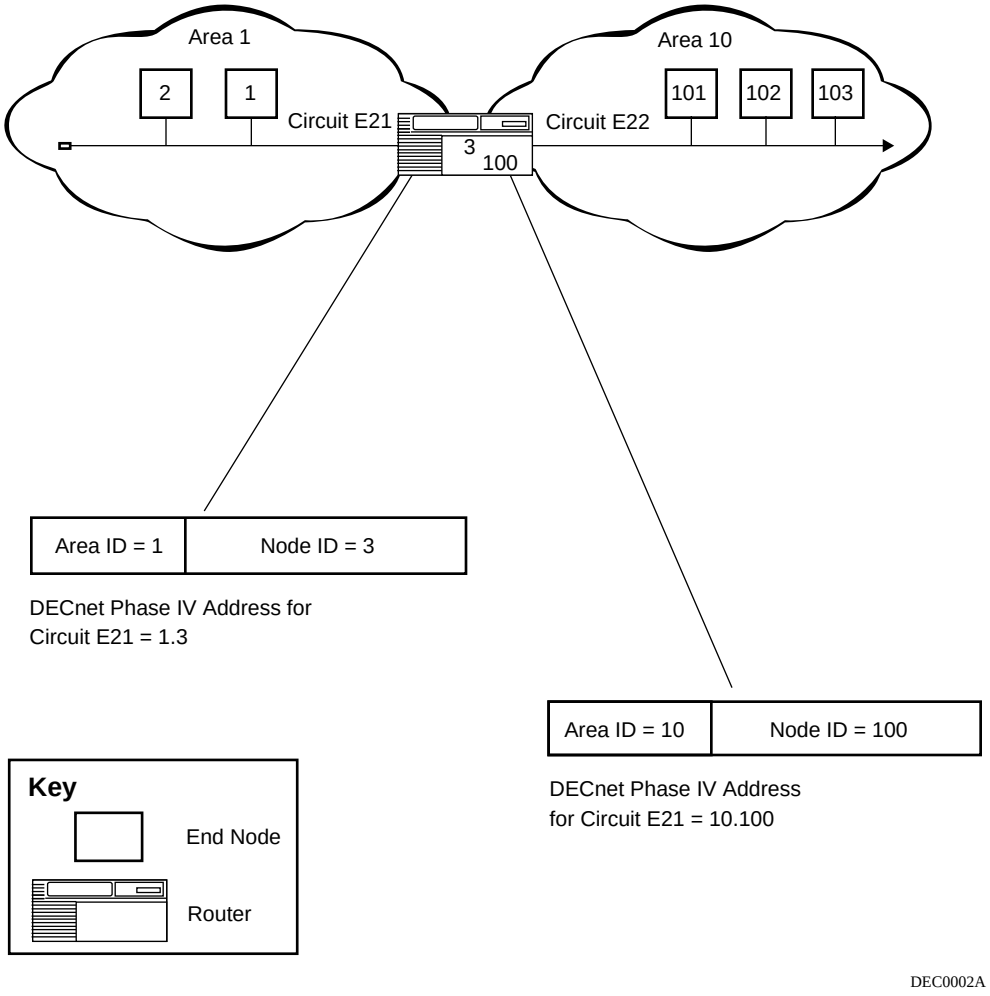

Figure 1-2. Bay Networks Router with Multiple DECnet Addresses

DECnet Phase V Organization

DECnet Phase V is an implementation of the Open Systems Interconnection (OSI) Connectionless-mode Network Layer protocols. These protocols include Connectionless Network Protocol (CLNP), End System to Intermediate System (ES-IS) protocol, and Intermediate System to Intermediate System (IS-IS) protocol.

Each system in a DECnet Phase V network is assigned a Network Service Access Point (NSAP) address. Each DECnet Phase V NSAP address must be globally unique and can be from 10 to 20 bytes in length. However, a local DECnet network does not need a unique address.

For more information about Phase V network organization and addressing, refer to Chapter 1 of *Configuring OSI Services*.

Routing DECnet Packets across the Network

The Bay Networks routing software for DECnet services uses a datagram service to route packets through the DECnet network. Routing within an area is called Level 1 (or intra-area) routing; routing between areas is called Level 2 (or interarea) routing.

You can configure the Bay Networks routing software to perform either *Level 1 and Level 2* routing, or to perform *Level 1 Only* routing.

- Use Level 1 and Level 2 routing to maintain paths to all areas within a DECnet network.
- Use Level 1 Only routing to maintain paths to only those systems within the router's local area. Level 1 Only routing prevents the sending of Level 2 routing updates, thus reducing traffic on an interface.

By default, the Bay Networks routing software for DECnet services performs both types of routing. When the router performs both Level 1 and Level 2 routing, you can configure each router interface as either Level 1 and Level 2, or as Level 1 Only.

When you configure the router to perform Level 1 Only routing, the router maintains paths only to those systems within its local area. When the router performs Level 1 Only routing, you must configure all router interfaces as Level 1 Only.

When a Bay Networks router receives a packet, it examines the destination address contained in the packet header. If the destination address is within the same area as the router, the router forwards the packet toward the destination system using the least-cost path. If the address is to another area, the router behaves differently depending on whether the interface performs Level 1 and Level 2 routing or Level 1 Only routing:

- If the router interface performs both Level 1 and Level 2 routing, the router forwards the packet to the specified area using the least-cost path.
- If the router interface performs Level 1 Only routing, the router forwards the packet to the nearest Level 2 router.
- If the router and all of its interfaces perform Level 1 Only routing, the router forwards the packet to the nearest Level 2 router.

The Routing Process

Routing a DECnet packet through the network involves

- Updating adjacent routers on the availability of surrounding nodes and circuits
- Listening for messages from adjacent routers identifying available nodes and circuits
- Determining the routing path with the least cost
- Forwarding the packet to the specified adjacent node

Update Process

The Bay Networks router software for DECnet services continually monitors the circuits directly attached to it. It periodically receives routing control messages from its adjacent routers. These routing updates inform the router of the current network topology. For example, if a circuit on a router fails, or another circuit is added, the network topology changes. The router then generates and transmits routing updates to all adjacent routers informing them of the changes. Timers control how often the router sends out updates.

Routing updates describe which nodes in the local area are reachable (called node or Level 1 topology updates), and which other areas in the network are reachable (called area or Level 2 topology updates). Routers use this information to update their routing tables.

Listening Process

The router periodically receives *Hello* messages from its adjacent routers, informing it of their identity and of the circuits the router can use to reach the adjacent nodes. The router stores this information in an adjacency table, thus creating a database of *next hops* to use to forward data packets. A hop is the logical distance between two nodes.

Decision Process

The router calculates the least-cost paths from itself to all other systems it can reach, using information it receives from other routers and stores in routing tables. If the least-cost path is disabled, or a node fails, the router finds an alternate path, if one exists.

Site Manager assigns every circuit on a DECnet network a default cost. During the decision process, the router running DECnet calculates the total path cost of forwarding a datagram along each possible path toward its destination. The total path cost is the sum of the costs of the outbound circuits that make up the path (Figure 1-3). The least-cost path is the one that the router prefers.

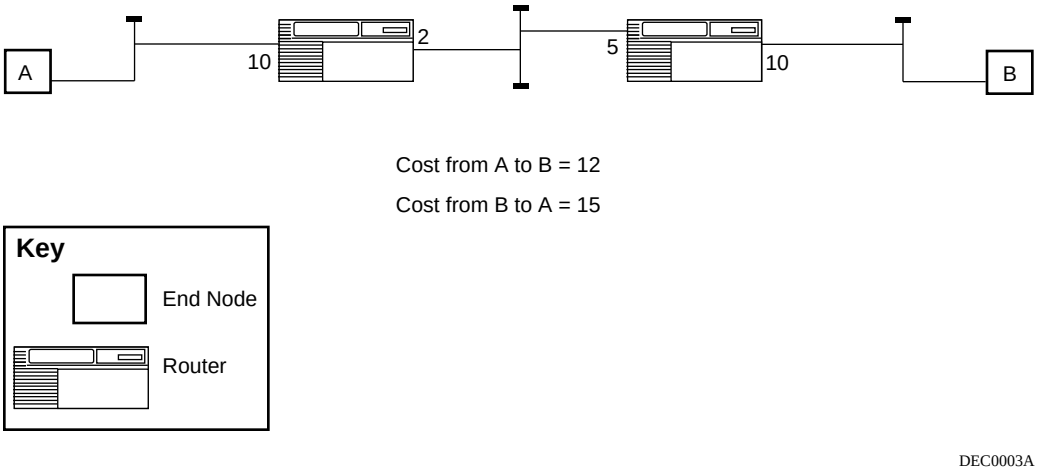

Figure 1-3. Calculating the Least-Cost Path

When deciding among multiple paths to a destination, the router chooses the path that is assigned a lower path cost over one assigned a higher cost, even if the lower-cost path is longer (Figure 1-4). If two paths have the same cost, the router chooses the path whose next hop has the higher address. The amount of traffic on a circuit does not affect the path selected by the router.

Once the router determines the least-cost path to a destination, it stores the identity of the corresponding adjacent router in its forwarding database. The adjacent router is the next hop on the path toward the destination.

The router keeps separate forwarding databases for intra-area and interarea routing. If you configure the router to perform Level 1 Only routing, it does not process Level 2 updates. Instead, it forwards interarea traffic to the nearest Level 2 router.

The complete distance (or number of hops) that a packet travels from the source to its destination is the path length. The maximum number of hops the routing algorithm will forward a packet to is called the maximum hops value. (To set the maximum hops value, refer to Chapter 3.) If the distance between the source and destination exceeds the maximum hops value, the packet is returned or dropped.

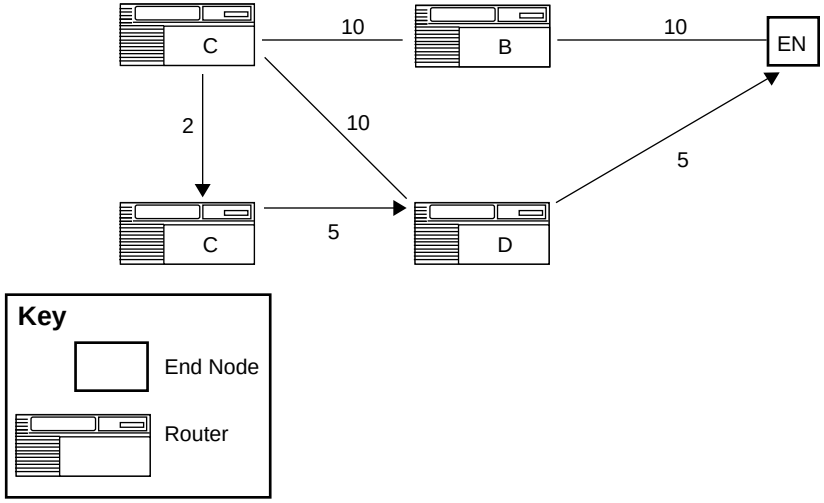

Router A wants to route a packet to the end node. Three different paths are available.

Router A forwards the packet along path choice 3 because it has the lowest Total Path Cost (12).

Path Choice	Path Length	Path Cost
A to B, B to EN	2 hops	20
A to D, D to EN	2 hops	15
A to C, C to D, D to EN	3 hops	12

DEC0004A

Figure 1-4. Least-Cost Path to a Destination

Forwarding Process

When a router receives a packet, it examines the destination address contained in the packet header to determine whether to route the packet locally (intra-area) or forward it to another destination (interarea).

Table 1-1 shows how the router forwards a packet, based on the destination address in the packet header and whether the router is configured for Level 1 Only routing or Level 1 and Level 2 routing.

Table 1-1. Router Forwarding Based on the Destination Address in the Packet Header

Destination Address	Router Configuration (Level 1 and Level 2 or Level 1 Only)	Router Action
Intra-area	either	Forwards the packet toward the destination system.
Interarea	Level 1 and Level 2	Forwards the packet to the next-hop router, node, or end system specified in its forwarding database.
Interarea	Level 1 Only	Forwards the packet to the nearest Level 2 router.
Unknown	either	Returns the packet to the source node if the return to sender flag is set in the data packet.
Unreachable (for example, if the maximum hops value is exceeded)	Level 1 and Level 2	Drops the packet.

The Designated Router

You assign a *designated router* to each circuit in a DECnet network. If an end node on an Ethernet segment receives a packet it cannot forward (either because the destination node's address is not in the end node's destination address cache, or the destination node does not reside on the circuit), the end node forwards the packet to the designated router. The designated router then forwards the packet toward the destination.

You specify a designated router by assigning a router the highest priority value among all routers on the Ethernet circuit. If you do not choose a designated router, or if you assign two or more routers the same priority, the router assigned with the highest Node ID becomes the designated router by default. refer to Chapter 3 for details on assigning the designated router.

DECnet IV to V Transition

The DECnet IV to V Transition feature provides the following capabilities:

- Routers running DECnet Phase V can map DECnet Phase IV network layer addresses to compatible Phase V NSAP addresses, and convert Phase IV data packets to Phase V Connectionless Network Protocol (CLNP) packets before forwarding them to a Phase V end node.
- Routers running DECnet Phase IV can map DECnet Phase V NSAP addresses to compatible Phase IV addresses, and convert Phase V CLNP packets to Phase IV data packets before forwarding them to a Phase IV end node.
- Routers running Phase V can learn and advertise adjacent Phase IV end node addresses.
- Routers running Phase IV can learn and advertise adjacent Phase V end node addresses.
- Routers running DECnet Phase IV or DECnet Phase V can forward packets without translation when routing their native protocols.

Translating DECnet Addresses

With the DECnet IV to V Transition feature enabled, a router can always translate a DECnet Phase IV network layer address to a Phase V NSAP address. However, because a Phase V address is larger than a Phase IV address, a router can translate a Phase V address only if it is Phase IV-compatible.

A Phase V address is Phase IV-compatible if

- The leading bytes of the Phase V address match the configured local Phase IV Prefix. The local Phase IV Prefix defines the addresses eligible for translation within a local Phase IV routing domain.
- The high-order value of the Phase V System ID is AA000400, which is the DECnet architectural constant.
- The Area component of the Phase IV address in the Phase V System ID is the same as the Area field of the Phase V Area Address.

Figure 1-5 shows how a router maps a DECnet Phase V address so that it is Phase IV-compatible.

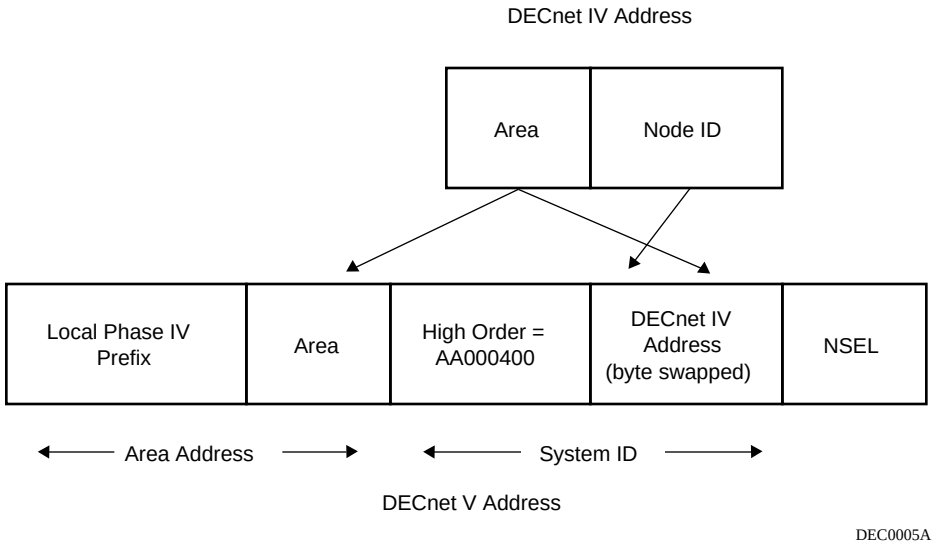

Figure 1-5. DECnet Phase IV to Phase V Address Mapping

The local Phase IV Prefix and Area fields of the Phase IV-compatible address make up the *Area Address*. The Area Address identifies the area in a DECnet network where a node resides. The High Order and DECnet IV Address fields of the Phase IV-compatible address make up the *System ID*. The System ID identifies a node within an area.

Translating Data Packets

With the DECnet IV to V Transition feature enabled, a router can always translate a Phase IV data packet to a Phase V CLNP packet. However, there are restrictions when a router translates a Phase V packet to a Phase IV packet:

- The packet cannot be fragmented.
- The packet must fit the Phase IV maximum transmission unit (MTU) size of 1498 bytes.

Phase IV to Phase V

A router running DECnet Phase IV always attempts to forward a Phase IV data packet by looking up the destination address in the DECnet Phase IV forwarding tables. If you enable the DECnet IV to V Transition feature, the router performs the following actions:

1. **If the router does not find the destination address in the Phase IV forwarding table, the router maps the Phase IV address to a Phase V address and looks up its destination in the Phase V forwarding table.**
2. **If the router finds the destination address in the Phase V forwarding table, the router running Phase V translates the source address and Phase IV data packet header to a Phase V CLNP packet header.**
3. **If the router does not find the destination address in the Phase V forwarding table, the router running Phase V returns the packet to the router running Phase IV for error processing.**

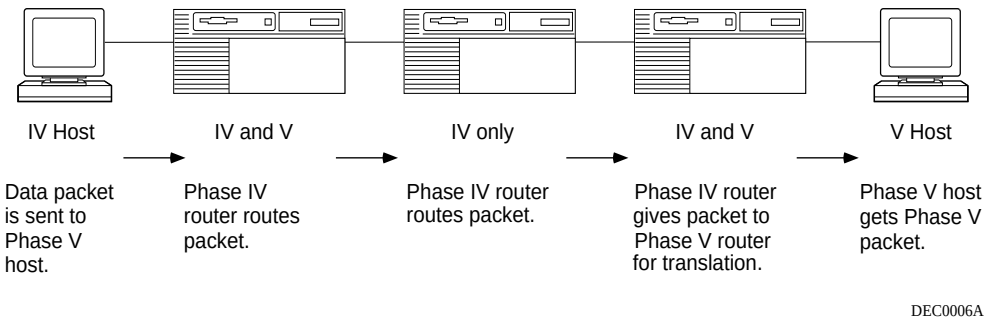
IV Host
IV and V
IV only
IV and V
V Host
Data packet is sent to Phase V host.
Phase IV router routes packet.
Phase IV router routes packet.
Phase IV router gives packet to Phase V router for translation.
Phase V host gets Phase V packet.
DEC0006A

Figure 1-6. Translation of a DECnet Phase IV Data Packet to a Phase V CLNP Packet

Phase V to Phase IV

In the same way, a router running DECnet Phase V always attempts to forward a Phase V CLNP packet by looking up the destination address in the DECnet Phase V forwarding tables. If you enable the DECnet IV to V Transition feature and the router does not find the destination address, the router performs the following actions:

1. **If the address is Phase IV-compatible, the router maps the Phase V address to a Phase IV address and looks up its destination in the Phase IV forwarding table.**

2. **If the router finds the destination address in the Phase IV forwarding table, the DECnet router running Phase IV translates the source address and Phase V CLNP packet header to a Phase IV data packet header.**
3. **If the router does not find the destination address in the Phase IV forwarding table, the router running Phase IV returns the packet to the router running Phase V for error processing.**

Figure 1-6 illustrates the translation of a DECnet Phase IV data packet to a Phase V CLNP packet. Routers in the network are configured either with Phase IV only or with both Phase IV and Phase V.

1. **A Phase IV host sends a data packet to a Phase V end node. The Phase IV host routes the packet to a router running both Phase IV and Phase V.**
2. **Because the router has Phase IV configured, it routes the Phase IV data packet to the next router on the network, which also has Phase IV configured.**
3. **This router routes the Phase IV data packet to the next router on the network, which has both Phase IV and Phase V configured.**
4. **Because the destination address of the packet is a Phase V end node, the router maps the address to a Phase V address, and then looks it up in the Phase V forwarding tables. The router then translates the source address and packet header.**
5. **The router then forwards the packet to the Phase V end node.**

Advertising Routes

With the DECnet IV to V Transition feature enabled, the only routing information exchanged between DECnet Phase IV and Phase V is end node addresses.

The Phase IV router advertises Phase V end nodes in Level 1 topology update packets. The DECnet Phase V router can reside in only one area. Therefore, the Phase V router advertises Phase IV end nodes in Level 1 link state packets only for the areas in common between Phase IV and Phase V.

DECnet IV to V Basic Transition Strategy

Bay Networks uses a dual-stack approach to support the DECnet IV to V Transition feature. This approach provides the following advantages:

- Phase IV and Phase V routing are done in parallel. A router routes packets whose source and destination nodes operate the same phase of DECnet, using their native routing protocol.
- A router translates a packet when necessary and only once.
- You can transition routers incrementally rather than all at once.

The following strategy allows you to use the DECnet IV to V Transition feature to support a graceful migration from a Phase IV network to a Phase V network.

1. **All routers run Phase IV with contiguous areas and contiguous Level 2 backbone.**
2. **All routers continue to run Phase IV. On an individual basis, routers run Phase V with the DECnet IV to V Transition feature enabled. All routers running Phase V are contiguous within areas.**
3. **All routers in the routing domain run Phase IV and Phase V with the DECnet IV to V Transition feature enabled.**
4. **Phase IV is turned off on an individual basis; continuity is not necessary at this point. If Phase IV routing fails for a particular DECnet data packet, then the router forwards the packet using Phase V.**
5. **All routers run Phase V. Only routers with adjacent Phase IV-only end nodes run Phase IV and Phase V with the DECnet IV to V Transition feature enabled. A Phase V host runs in Phase IV-compatible mode when it is on the same local area network (LAN) segment as a Phase IV host.**

For details on adding the DECnet IV to V Transition feature and editing the parameters, refer to Chapter 3.

Static Routes

The Bay Networks routing software for DECnet services allows you to configure *static routes* to another network or node for the Bay Networks router. Static routes are manually configured routes that specify the transmission path a datagram must follow based on the datagram's destination address.

Use static routes and disable the sending of Level 1 and Level 2 topology update packets to reduce traffic over wide area networks (WANs) or slow links. Static routes restrict the paths that datagrams follow to paths you specifically configure.

For example, Figure 1-7 shows three Level 2 routers that reside in different areas. To configure a static route from Router A to Router C, you must specify the source address, next hop, and destination address. Because this is a route from Area 1 to Area 2, the static route type is Level 2.

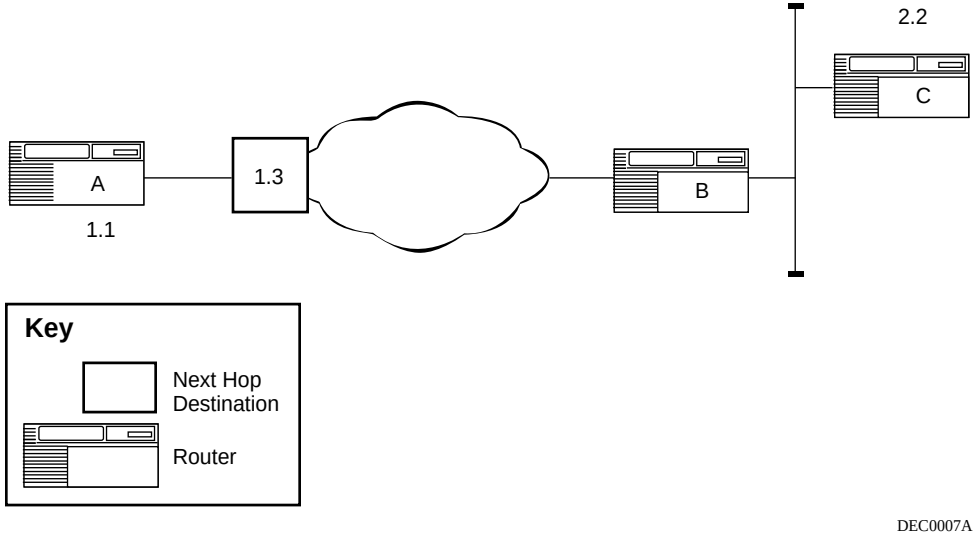

Figure 1-7. Static Routes Defined for Routers Residing in Different Areas

You can refer to “Configuring Static Routes” in Chapter 3 for details on adding, editing, and deleting static routes.

Static Adjacency Support

The Bay Networks routing software for DECnet services creates and maintains its adjacency database by periodically broadcasting Hello messages to its neighbors. In DECnet terminology, an *adjacency* is a directly connected circuit-neighbor pair toward which packets are forwarded by the router (a *neighbor* is an adjacent host). The neighbor can be a Level 1 or Level 2 router, or an end node.

The Bay Networks routing software for DECnet services allows you to configure *static adjacencies* for the Bay Networks router. Static adjacencies specify the DECnet and data link layer address of the neighbor, and the circuit used to reach the neighbor.

Unless a static adjacency is explicitly deleted from the system, it remains in the router's adjacency database -- even if the router never receives Hello messages from the adjacent host. Thus, by configuring static adjacencies and disabling Hello message generation, you reduce Hello message traffic between the router and its neighbors.

Note: Static adjacencies are recommended over wide area network lines to help reduce overhead traffic. Static adjacencies are not recommended over local area network connections, because if a remote node is removed from the network, the local router does not recognize the topology change.

For example, DECnet Routers A and B reside in the same area (Figure 1-8).

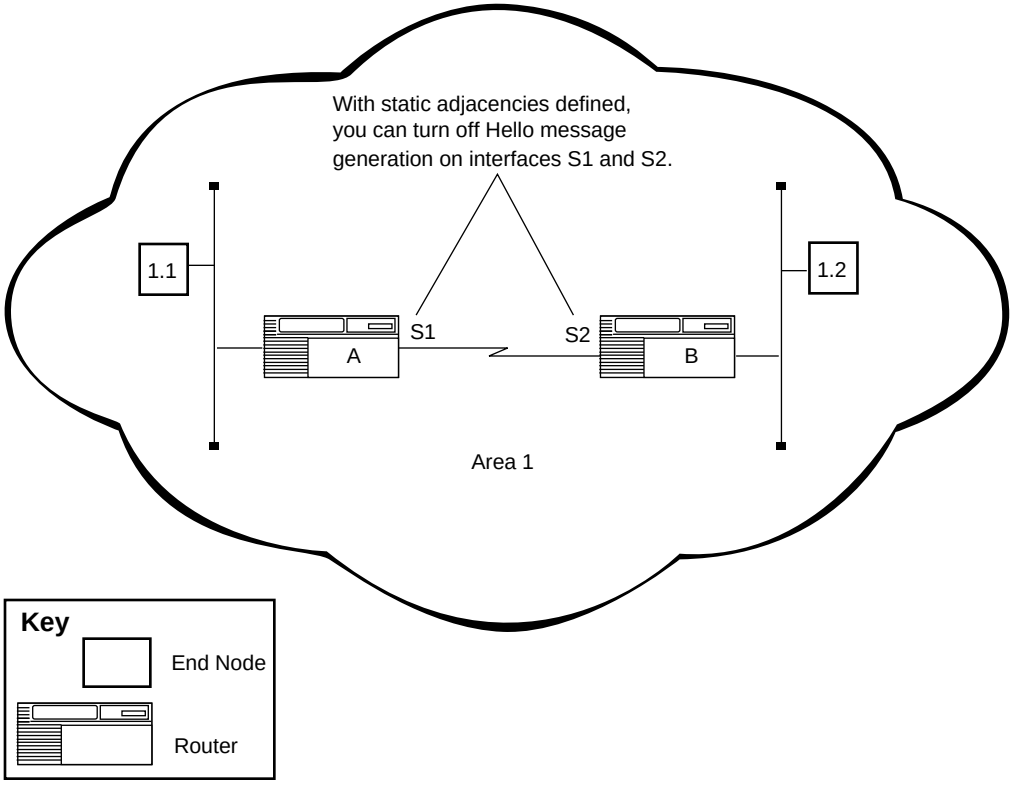

Figure 1-8. Static Adjacencies Defined for Routers Residing in the Same Area

The only network information the routers need to exchange is Level 1 topology information. To reduce traffic overhead, do the following:

- Configure a static adjacency for interface S1 that specifies its neighbor —interface S2 on Router B.
- Configure a static adjacency for interface S2 that specifies its neighbor —interface S1 on Router A.
- Set the Router Hello parameter to Disable for both interfaces.

As a result, the routers know about each other's existence, even though no Hello messages are exchanged.

If two Level 2 routers reside in different areas, you can reduce both Hello message traffic and Level 1 topology traffic between the two systems by disabling the Router Hello parameter and the Level 1 Topology Update parameter for the connecting interfaces (Figure 1-9). If you disable the Level 1 Topology Update parameter, you prevent the Bay Networks router running DECnet from sending Level 1 topology update packets to other routers.

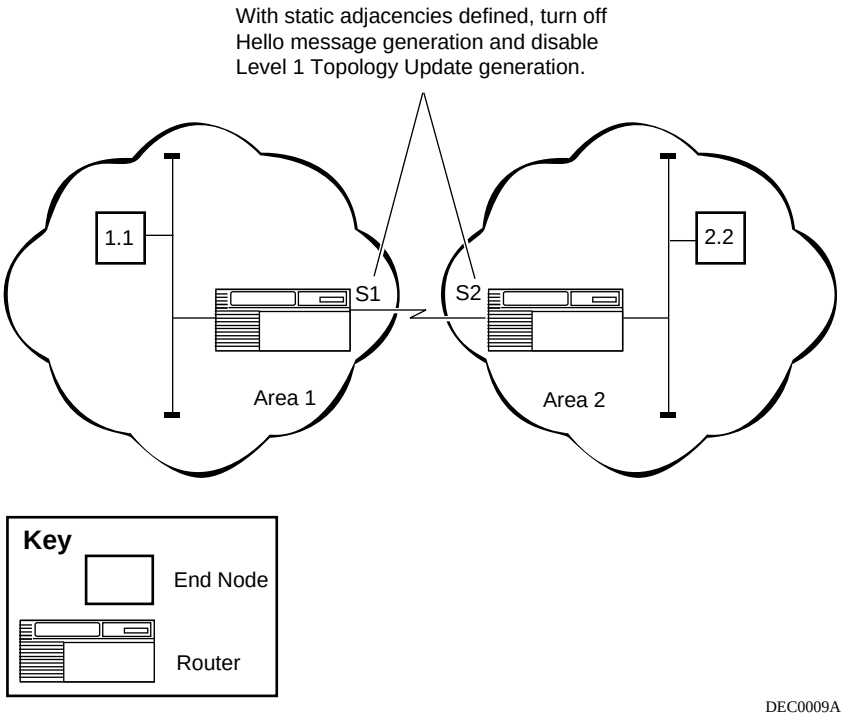

Figure 1-9. Static Adjacencies Defined for Routers Residing in Different Areas

You can also disable the Level 2 Topology Update parameter if you want to prevent the Bay Networks router running DECnet from sending Level 2 topology update packets to other routers. In this case, you use static routes to establish transmission paths between connected routers.

Refer to Chapter 3 for details about configuring static adjacencies and setting the Router Hello, Level 1 Topology Update, and Level 2 Topology Update parameters.

For More Information

For technical details about DECnet protocol implementation, see *DECnet Digital Network Architecture Phase IV Routing Layer Function Specification, Version 2.0* (Digital Equipment Corporation, December 1983).

Chapter 2
Enabling DECnet Services

This chapter describes how to enable DECnet Phase IV services. It assumes you have read *Configuring Routers* and that you have

1. **Opened a configuration file**
2. **Specified router hardware if this is a local mode configuration file**
3. **Selected the link- or net-module connector on which you are enabling DECnet Phase IV, or configured a WAN circuit if this connector requires one**

When you enable DECnet services, you are required to specify only a few parameters. The Configuration Manager supplies default values for the remaining parameters. If you want to edit these default values, refer to Chapter 3, "Editing DECnet Parameters."

Note: Although you can accept the default values for most DECnet parameters, we recommend that you try to tune your DECnet configuration to closely match your actual configuration. Typically, when you customize the parameters, DECnet uses less local memory, enhancing DECnet performance.

For each DECnet parameter, this guide provides the default setting, valid parameter options, the parameter function, instructions for setting the parameter, and the Management Information Base (MIB) object ID.

The Technician Interface lets you modify parameters by issuing **set** and **commit** commands that specify the MIB object ID. This process is equivalent to modifying parameters using Site Manager. For more information about using the Technician Interface to access the MIB, refer to *Using Technician Interface Software*.

Caution: The Technician Interface does not verify that the value you enter for a parameter is valid. Entering an invalid value can corrupt your configuration.

Enabling DECnet Phase IV on an Interface

To enable DECnet Phase IV on an interface:

1. **Select DECnet from the Select Protocols menu.**

   The Select Protocols menu appears after you either select a link- or net-module connector, or finish configuring a WAN circuit.

   The DECnet IV Configuration window appears (Figure 2-1).

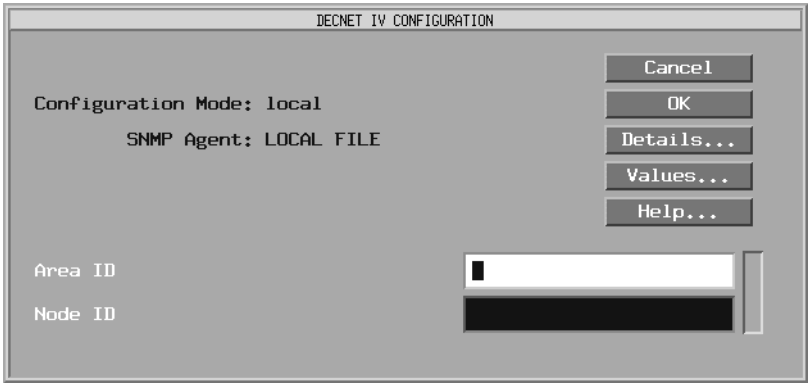

Figure 2-1. DECnet IV Configuration Window

2. **Configure the parameters using the descriptions that follow as a guide.**
3. **When you finish configuring the parameters, click on OK.**

   To edit the default values for DECnet parameters, refer to Chapter 3, “Editing DECnet Parameters” for instructions.

- Enable default DECnet Phase IV services. To do this, click on OK.
- Edit the default values. To do this, click on Details. (Refer to Chapter 3, Editing DECnet Parameters for instructions.)

Parameter:	**Area ID**
Default:	None
Range:	1 to 63
Function:	Specifies a unique DECnet Phase IV Area ID for this circuit. The Area ID is the first 6 bits of a DECnet Phase IV node address. You specify the Area ID on a circuit-by-circuit basis; that is, a single router can have individual circuits residing in different areas.
Instructions:	Enter the Area ID assigned to this circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.3.1.1

Parameter:	**Node ID**
Default:	None
Range:	1 to 1023
Function:	Specifies a unique DECnet Node ID for this circuit. The Node ID is the last 10 bits of a DECnet node address. Note that individual circuits on a Bay Networks router may have different Node IDs.
Instructions:	Enter the Node ID assigned to this circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.3.1.2

Chapter 3
Editing DECnet Parameters

Once you enable a DECnet interface, you can use Site Manager to

- Edit DECnet parameters
- Add, edit, or delete a static route, a static adjacency, or the DECnet IV to V Transition
- Delete DECnet globally from the Bay Networks router

The instructions in this chapter assume that you have already configured at least one DECnet interface. If you have not yet configured a DECnet interface, or if you want to add additional DECnet interfaces, refer to Chapter 2, "Enabling DECnet Services."

Note: You must configure both DECnet Phase IV and OSI on each network interface participating in a DECnet IV to V Transition.

If you have a mixed Phase IV and Phase V network, Configuring OSI Services for details on configuring OSI. For instructions on configuring DECnet filters, see Configuring Routers.

For each DECnet parameter, this guide provides the default setting, valid parameter options, the parameter function, instructions for setting the parameter, and the Management Information Base (MIB) object ID.

The Technician Interface lets you modify parameters by issuing **set** and **commit** commands that specify the MIB object ID. This process is equivalent to modifying parameters using Site Manager. For more information about using the Technician Interface, refer to *Using Technician Interface Software*.

Caution: The Technician Interface does not verify that the value you enter for a parameter is valid. Entering an invalid value can corrupt your configuration.

Accessing DECnet Parameters

You access all DECnet parameters from the Configuration Manager window (Figure 3-1). See *Configuring Routers* for instructions on accessing this window.

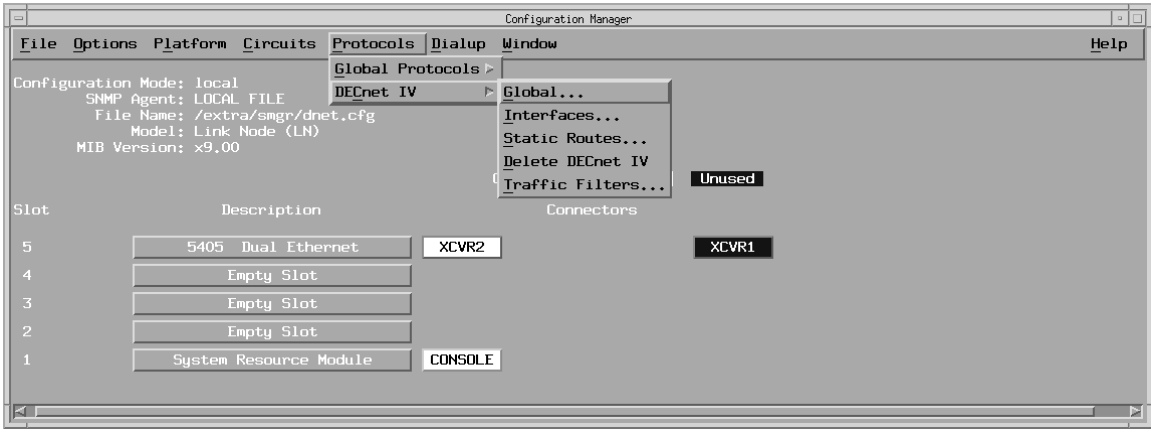

Figure 3-1. Configuration Manager Window

To customize the router software for DECnet services, edit any of these DECnet parameters:

- Global
- Interface
- Static route
- Static adjacency
- DECnet IV to V Transition

Editing DECnet Global Parameters

To edit the DECnet global parameters, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Protocols > DECnet IV > Global.**

   The Edit DECnet Global Parameters window appears (Figure 3-2).

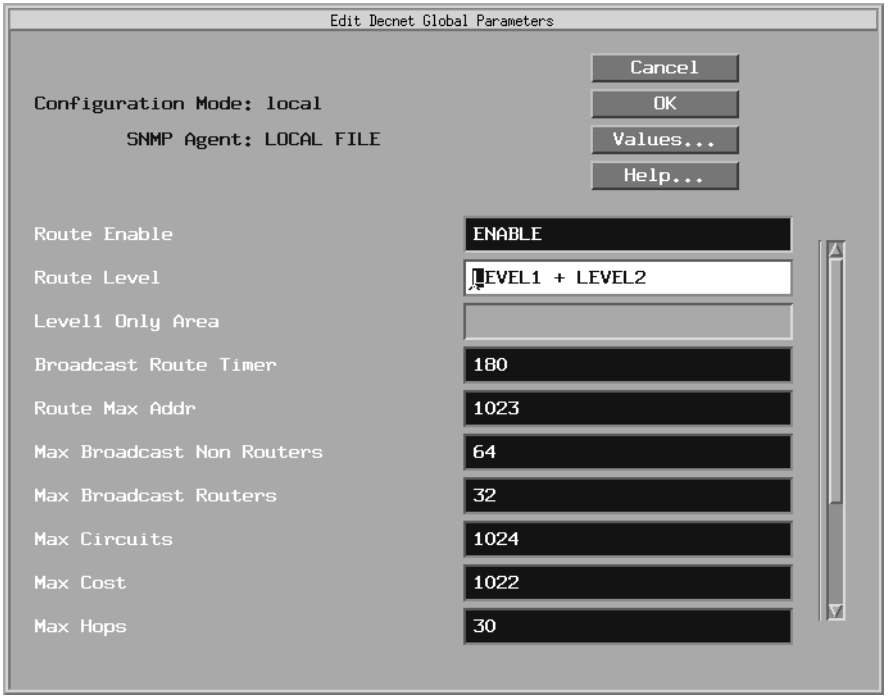

Figure 3-2. Edit DECnet Global Parameters Window

2. **Edit the parameters, using the descriptions in the next section as a guide.**
3. **Click on OK to save your changes and exit the window.**

   Site Manager returns you to the Configuration Manager window.

DECnet Global Parameter Descriptions

Use the following descriptions as a guide when you configure the parameters in the Edit DECnet Global Parameters window (refer to Figure 3-2).

Parameter:	**Route Enable**
Default:	Enable
Options:	Enable | Disable
Function:	Enables or disables DECnet routing on the entire Bay Networks router.
Instructions:	Set to Disable only if you want to globally disable DECnet routing on all interfaces where it is configured. Otherwise, use the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.2

Parameter:	**Route Level**
Default:	Level 1 and Level 2
Options:	Level 1 and Level 2 | Level 1 Only
Function:	Determines whether the router performs both Level 1 and Level 2 routing or Level 1 Only routing.
Instructions:	Select Level 1 and Level 2 routing to maintain paths to all areas within a DECnet network. Select Level 1 Only to maintain paths to only those systems within the router's local area. If you select Level 1 Only routing, you can only configure router interfaces as Level 1 Only.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.16

Parameter:	**Level 1 Only Area**
Default:	1
Range:	1 to 63
Function:	Specifies the DECnet Area ID for all circuits if you configured the router as Level 1 Only. The Area ID is the first 6 bits of a DECnet node address.
Instructions:	Specify the Area ID by entering a number between 1 and 63. You cannot configure this parameter unless you first configure the router to perform Level 1 Only routing.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.20

Parameter:	**Broadcast Route Timer**
Default:	180
Range:	1 to 65535
Function:	Determines the maximum amount of time in seconds between routing updates that the router issues. If no routing update occurs before this timer expires, the router generates a routing update automatically.
Instructions:	Enter a number between 1 and 65535. If you want the Bay Networks router to generate routing updates more frequently, enter a lower value than the current one.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.4

Parameter:	**Route Max Addr**
Default:	1023
Range:	1 to 1023
Function:	Specifies the highest Node ID contained within all areas.
Instructions:	We recommend accepting the default value. If you change the default, make certain to use the same value for each router in the network.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.6

Parameter:	**Max Broadcast Non Routers**
Default:	64
Range:	0 to 1023
Function:	Specifies the maximum number of end node adjacencies residing on all circuits for a single slot. The higher the number of adjacent end nodes, the greater the impact on the router's performance and memory use.
Instructions:	Consult your network topology drawing. If there are more than 64 end node adjacencies on any of the router's slots, increase this number to reflect your network topology.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.7

Parameter:	**Max Broadcast Routers**
Default:	32
Range:	0 to 1023
Function:	Specifies the maximum number of router adjacencies on all circuits for a single slot.
Instructions:	Consult your network topology drawing. If there are more than 32 router adjacencies on any of the router's slots, increase this number to reflect your network topology. Decrease this number if there are fewer than 32 router adjacencies on a single slot.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.8

Parameter:	**Max Circuits**
Default:	1024
Range:	1 to 1024
Function:	Specifies the highest circuit number that this router can recognize, that is, the maximum number of circuits that this router can recognize.
Instructions:	We recommend accepting the default value.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.9

Parameter:	**Max Cost**
Default:	1022
Range:	1 to 1022
Function:	Specifies the maximum path cost from this router to any destination node in the local area. The path cost is the sum of the individual circuit costs between this router and the destination node. The router declares a destination node unreachable if the least-cost path to the destination node exceeds this number.
Instructions:	Determine the maximum path cost between this router and any node in the area, and enter it here.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.10

Parameter:	**Max Hops**
Default:	30
Range:	1 to 30
Function:	Specifies the maximum path length in hops between this router and any other destination node in the local area. A hop is the logical distance between two nodes.
Instructions:	Calculate the maximum path length in hops from this router to any other destination node in the area. Double this number and enter it here.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.11

Parameter:	**Max Visits**
Default:	63
Range:	1 to 63
Function:	Detects routing loops by enabling the packet lifetime control, which limits the number of times a packet can pass through a router. If the router receives a packet that (1) is not destined for the router, and (2) whose Max Visits value is exceeded, the router discards the packet because it has traversed too many nodes.
Instructions:	Determine the maximum path length in hops between the two nodes farthest apart on the network. Enter a number that is at least as large as this value.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.12

Parameter:	**Area Max Cost**
Default:	1022
Range:	1 to 1022
Function:	Specifies the maximum path cost from this router to any other area in the network. The router declares a destination area unreachable if the least-cost path to the destination area exceeds this number.
Instructions:	Determine the total path cost of the longest path between this router and any other area in the network and enter it here.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.13

Parameter:	**Area Max Hops**
Default:	30
Range:	1 to 30
Function:	Specifies the maximum path length in hops from this router to any other destination area in the network. The router declares a destination area unreachable if the path length to the destination area exceeds this number.
Instructions:	Determine the maximum path length in hops from this router to any other destination area in the network. Double this number, and enter it here.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.14

Parameter:	**Max Area**
Default:	63
Range:	1 to 63
Function:	Specifies the highest area number in your DECnet network, that is, the number of areas in your DECnet network. You may want to set this value lower than the default to conserve slot memory.
Instructions:	Refer to your network topology map, and then enter the highest area number.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.1.15

Editing DECnet Interface Parameters

To edit a DECnet interface, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Protocols** > **DECnet IV** > **Interfaces.**

   The DECnet IV Interface List window appears (Figure 3-3). The window displays all interfaces on which DECnet is enabled.

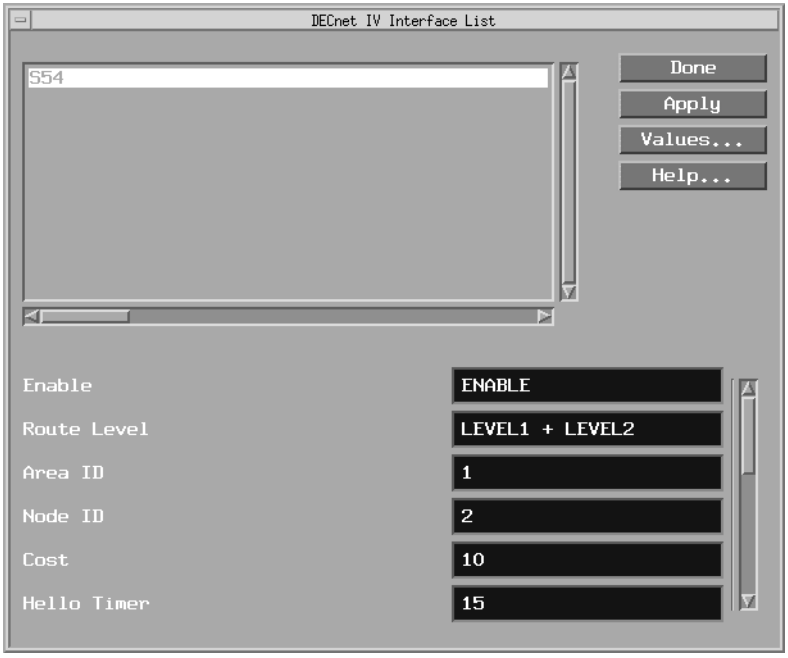

Figure 3-3. DECnet IV Interface List Window

2. **Click on the interface you want to edit.**
3. **Edit the parameters, using the descriptions in the next section as a guide.**
4. **Click on Apply to implement your changes.**
5. **Click on Done to exit the window.**

   Site Manager returns you to the Configuration Manager window.

Note: When you reconfigure an interface in dynamic configuration mode, DECnet restarts on that interface.

DECnet Interface Parameter Descriptions

Use the following descriptions as a guide when you configure the parameters in the DECnet IV Interface List window (refer to Figure 3-3).

Parameter:	**Enable**
Default:	Enable
Options:	Enable | Disable
Function:	Enables or disables DECnet over this circuit.
Instructions:	To disable DECnet over this circuit, set to Disable. Otherwise, accept the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.2

Parameter:	**Route Level**
Default:	Level 1 and Level 2
Options:	Level 1 and Level 2 | Level 1 Only
Function:	Determines whether the circuit performs both Level 1 and Level 2 routing or Level 1 Only routing. If you configured the router as Level 1 Only, the router automatically configures all circuits as Level 1 Only and this parameter does not appear in the DECnet IV Interface List window. If, at a later time, you change the router configuration to perform both Level 1 and Level 2 routing, all circuits will remain configured as Level 1 Only until you change them.
Instructions:	Select Level 1 and Level 2 to maintain paths to all areas within a DECnet network. Select Level 1 Only to maintain paths to only those systems within the router's local area.
MIB Object ID:	1.3.6.1.4.1.1.18.3.5.2.2.1.41

Parameter:	**Area ID**
Default:	None
Range:	1 to 63
Function:	Specifies a DECnet Area ID for this circuit. The Area ID is the first 6 bits of a DECnet node address. You specify the Area ID on a circuit-by-circuit basis, because a single Bay Networks router can have individual circuits residing in different areas.
Instructions:	Enter the Area ID assigned to this circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.4

Note: If you set the DECnet global parameter Route Level to Level 1 Only, the Area ID you specify in the Edit DECnet Global Parameters window overrides this parameter setting.

Parameter:	**Node ID**
Default:	None
Range:	1 to 1023
Function:	Specifies a unique DECnet Node ID for this circuit. The Node ID is the last 10 bits of a DECnet node address. Note that individual circuits on a Bay Networks router can have different Node IDs.
Instructions:	Enter the Node ID assigned to this circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.5

Parameter:	**Cost**
Default:	10
Range:	1 to 63
Function:	Specifies the relative cost of routing over this circuit. The sum of the individual outbound circuit costs from a source node to a destination node is the *total path cost*. When the router receives a data packet, it decides which circuit to forward the packet over based on the *least-cost path* toward the destination.
Instructions:	If you want the circuit to be used on a regular basis, assign it a low cost; similarly, assign the circuit a high cost if you do not want it used on a regular basis.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.9

Parameter:	**Hello Timer**
Default:	15
Range:	1 to 8191
Function:	Specifies in seconds how often the router broadcasts DECnet Hello messages to all nodes on this circuit.
Instructions:	Increase the Hello Timer if you want to reduce the amount of traffic traversing a slow line.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.10

Note: Inconsistent Hello Timer settings can cause confusion between DECnet routers and end nodes when rerouting occurs. We recommend that you set the Hello Timer parameter to the same value throughout your DECnet network.

Parameter:	**Max Routers**
Default:	33
Range:	0 to 33
Function:	Specifies the maximum number of routers attached to this circuit, including the router on which you are configuring DECnet services.
Instructions:	We recommend accepting the default value. If you change the default, refer to your network topology drawing to determine the number of routers and then enter it here.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.12

Parameter:	**Router Priority**
Default:	64
Range:	0 to 127
Function:	Determines which router becomes the designated router on a circuit. The designated router performs additional services for other nodes attached to the circuit. (All these nodes know the address of the designated router.) When an end node attempts to send a packet to a destination node that is not in its destination address cache, or does not reside on the circuit, it sends the packet to the designated router, which forwards the packet toward the destination. If you do not choose a designated router, or if you assign two or more routers the same priority, the router with the highest Node ID becomes the designated router by default.
Instructions:	Enter a router priority value from 0 to 127. If you want this node to be the designated router on this circuit, assign it the highest priority value among all routers on the circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.13

Parameter: **End Nodes MAC**

Default: None

Options: Frame Relay multicasting address | SMDS group address

Function: Assigns the All Endnodes multicast MAC address value to this circuit for use over Frame Relay and SMDS WAN connections. The multicast MAC address value you specify here determines the destination address for DECnet end node broadcast traffic across the Frame Relay or SMDS cloud. This parameter is valid only if this circuit is a Frame Relay or SMDS circuit.

Instructions: Enter the multicasting address (Frame Relay circuits) or group address (SMDS circuits) that you obtain from your service provider. If you do not specify a value for this parameter, broadcast traffic will be sent to *all* virtual circuits configured on the interface.

MIB Object ID: 1.3.6.1.4.1.18.3.5.2.2.1.31

Parameter: **End Routers MAC**

Default: None

Options: Frame Relay multicasting address | SMDS group address

Function: Assigns the AllRouters multicast MAC address value to this circuit for use over Frame Relay and SMDS WAN connections. This allows you to specify a destination address for DECnet Level 1 broadcast traffic across the Frame Relay or SMDS cloud. This parameter is valid only if this circuit is a Frame Relay or SMDS circuit.

Instructions: Enter the multicasting address (Frame Relay circuits) or group address (SMDS circuits) that you obtain from your service provider. If you do not specify a value for this parameter, broadcast traffic will be sent to *all* virtual circuits configured on the interface.

MIB Object ID: 1.3.6.1.4.1.18.3.5.2.2.1.32

Parameter:	**Area Routers MAC**
Default:	None
Options:	Frame Relay multicasting address | SMDS group address
Function:	Assigns the AllAreaRouters multicast MAC address value to this circuit for use over Frame Relay and SMDS WAN connections. This allows you to specify a destination address for DECnet Level 2 broadcast traffic across the Frame Relay or SMDS cloud. This parameter is valid only if this circuit is a Frame Relay or SMDS circuit.
Instructions:	Enter the multicasting address (Frame Relay circuits) or group address (SMDS circuits) that you obtain from your service provider. If you do not specify a value for this parameter, broadcast traffic will be sent to *all* virtual circuits configured on the interface.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.33

Parameter:	**Node Hello**
Default:	Enable
Options:	Enable | Disable
Function:	When disabled, keeps the DECnet router from sending Hello packets to end nodes. Use this parameter with a static adjacency to limit the amount of traffic sent over a WAN connection.
Instructions:	To limit the amount of traffic traversing the WAN connection between static adjacencies, set this value to Disable. Otherwise, accept the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.34

Parameter:	**Router Hello**
Default:	Enable
Options:	Enable | Disable
Function:	When disabled, keeps the DECnet router from sending Hello packets to other routers. Use this parameter with a static adjacency to limit the amount of traffic sent over a WAN connection.
Instructions:	To limit the amount of traffic traversing the WAN connection between static adjacencies, set this value to Disable. Otherwise, accept the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.35

Parameter:	**Level 1 Topology Update**
Default:	Enable
Options:	Enable | Disable
Function:	When disabled, keeps the DECnet router from sending Level 1 topology update packets to other routers. Use this parameter with a static adjacency to limit the amount of traffic sent over a WAN connection.
Instructions:	To limit the amount of traffic traversing the WAN connection between static adjacencies, set this value to Disable. Otherwise, accept the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.36

Parameter:	**Level 2 Topology Update**
Default:	Enable
Options:	Enable | Disable
Function:	When disabled, keeps the DECnet router from sending Level 2 topology update packets to other routers. Use this parameter with a static adjacency to limit the amount of traffic sent over a WAN connection.
Instructions:	To limit the amount of traffic traversing the WAN connection between static adjacencies, set this value to Disable. Otherwise, accept the default setting.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.2.1.40

Configuring Static Routes

Configure static routes when you want to control which path the router uses to route DECnet traffic to another network or node.

To configure a static route, select Protocols > DECnet IV > Static Routes from the Configuration Manager window (refer to Figure 3-1). The DECnet Static Routes List window appears (Figure 3-4). It lists all static routes that are defined. If you did not add any static routes, none are listed.

Figure 3-4. DECnet Static Routes List Window

Adding a Static Route

To add a static route:

1. **Click on Add in the DECnet Static Routes List window (refer to Figure 3-4).**

   The DECnet Static Routes Configuration window appears (Figure 3-5).

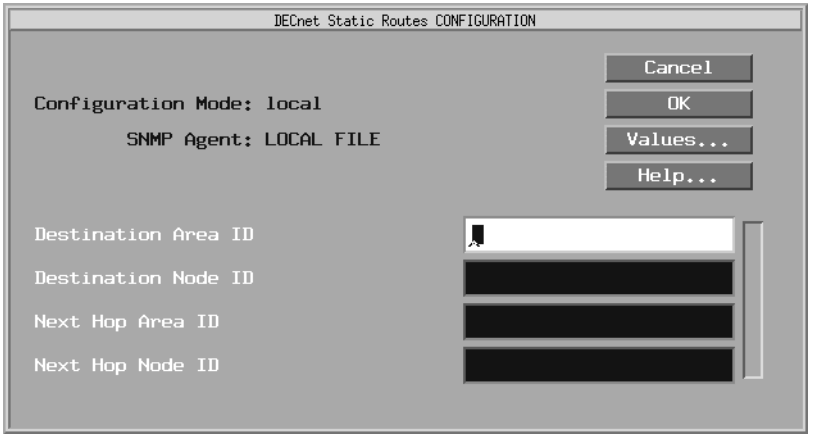

Figure 3-5. DECnet Static Routes Configuration Window

2. **Define the static route parameters, using the descriptions in the next section as a guide.**
3. **Click on OK.**

   The DECnet Static Routes List window displays the new static route you defined.
4. **Repeat Steps 1 through 3 to add more static routes.**

DECnet Static Route Parameter Descriptions

Use the following descriptions as a guide when you configure the parameters in the DECnet Static Routes List and DECnet Static Routes Configuration windows (refer to Figure 3-4 and Figure 3-5).

Parameter:	**Static Route Enable**
Default:	Enable
Options:	Enable | Disable
Function:	Specifies the state (active or inactive) of the static route record in the DECnet routing tables.
Instructions:	Select Disable to make the static route record inactive in the DECnet routing table; the DECnet router will not consider this static route. Select Enable to make the static route record active again in the DECnet routing table. If you did not first add a static route, no default is displayed and you cannot configure this parameter. When you add a static route, this parameter defaults to Enable.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.2

Parameter:	**Route Type**
Default:	Level 2
Options:	Level 1 | Level 2
Function:	Specifies the type of traffic that is routed over this interface. Level 1 routing is for routing data within an area. Level 2 routing is for routing data between areas.
Instructions:	Select the traffic type for this static route. If you did not first add a static route, no default is displayed and you cannot configure this parameter. When you add a static route, this parameter defaults to Level 2.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.3

Parameter:	**Route Cost**
Default:	10
Range:	1 to 63
Function:	Specifies the total cost of a route to a destination address. Keep in mind that routes with lower costs are preferred routes. This means that you can force traffic over particular routes if you like.
Instructions:	Enter the route cost assigned to the static route. If you did not first add a static route, no default is displayed and you cannot configure this parameter. When you add a static route, this parameter defaults to 10.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.6

Parameter:	**Destination Area ID**
Default:	None
Range:	1 to 63
Function:	Specifies the Area ID portion of the static route's destination DECnet address.
Instructions:	Enter the Area ID of the area in which the destination of this route resides.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.4

Parameter:	**Destination Node ID**
Default:	None
Range:	1 to 1023
Function:	Specifies the Node ID portion of the static route's destination DECnet address.
Instructions:	Enter the Node ID of the destination end system of this static route.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.5

Parameter:	**Next Hop Area ID**
Default:	None
Range:	1 to 63
Function:	Specifies the DECnet Area ID of the intermediate system that is the next hop on the path to the destination end system.
Instructions:	Enter the Area ID assigned to the next-hop intermediate system.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.7

Parameter:	**Next Hop Node ID**
Default:	None
Range:	1 to 1023
Function:	Specifies the DECnet Node ID of the intermediate system that is the next hop on the path to the destination end system.
Instructions:	Enter the Node ID assigned to the next-hop intermediate system.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.8.1.8

Editing Static Route Parameters

To edit a static route:

1. **Select the static route you want to edit from the list in the DECnet Static Routes List window (refer to Figure 3-4).**
2. **Edit the static route parameters, using the descriptions in the previous section as a guide.**
3. **Click on Apply to implement your changes.**
4. **Repeat Steps 1 through 3 to edit additional static routes.**
5. **Click on Done to exit the window.**

Deleting a Static Route

To delete a static route:

1. **Select the static route you want to delete from the list in the DECnet Static Routes List window (refer to Figure 3-4).**
2. **Click on Delete.**

   The DECnet Static Routes List window no longer displays the static route.
3. **Repeat Steps 1 and 2 to delete additional static routes.**
4. **Click on Done to exit the window.**

Configuring Static Adjacencies

The DECnet router allows you to specify static transmission paths to adjacent hosts. The static adjacency may or may not be another router.

Adding a Static Adjacency

To add a static adjacency, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Circuits > Edit Circuits.**

   The Circuit List window appears, which lists the circuits configured on the router (Figure 3-6).

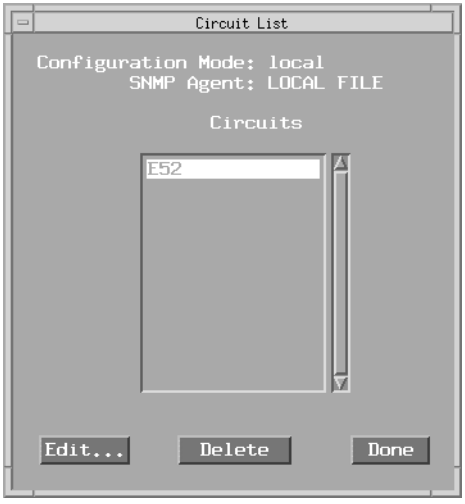

Figure 3-6. Circuit List Window

2. **Select a DECnet circuit from the list and click on Edit.**

   The Circuit Definition window for that circuit appears (Figure 3-7).

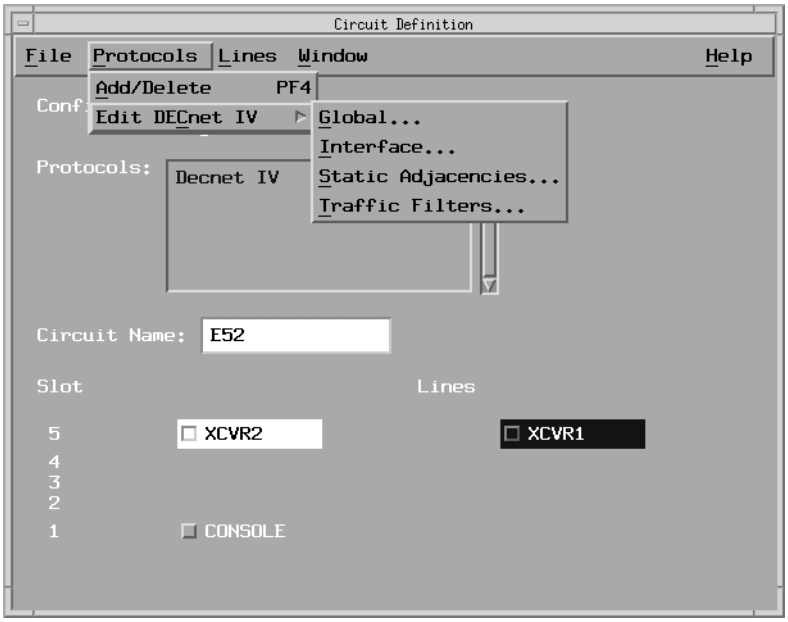

Figure 3-7. Circuit Definition Window

3. **Select Protocols > Edit DECnet IV > Static Adjacencies in the Circuit Definition window.**

   The DECnet Static Adjacent Hosts List window appears (Figure 3-8).

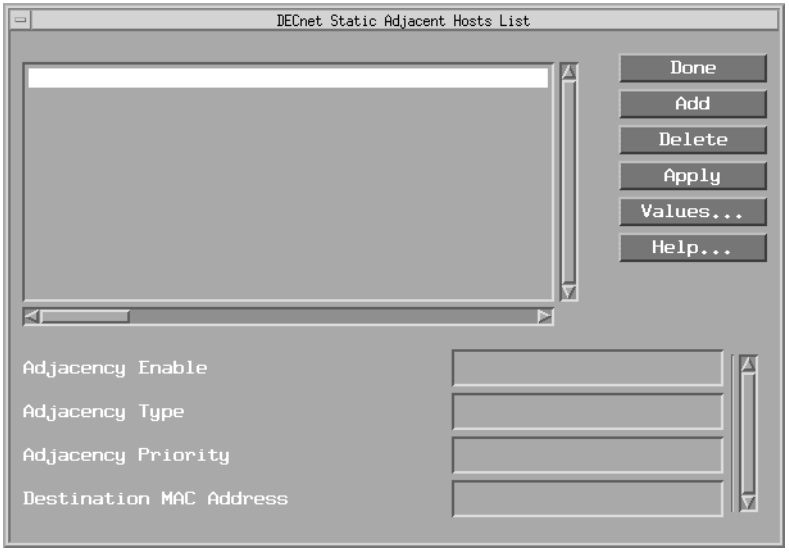

Figure 3-8. DECnet Static Adjacent Hosts List Window

4. **Click on Add.**

   The DECnet Static Adjacency Configuration window appears (Figure 3-9).

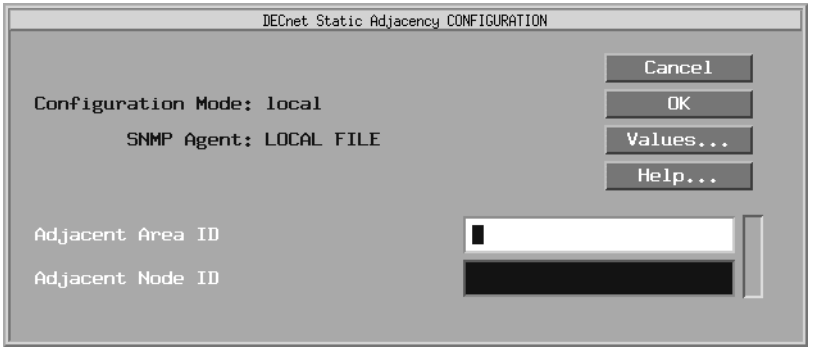

Figure 3-9. DECnet Static Adjacency Configuration Window

5. **Enter an adjacent Area ID and an adjacent Node ID, using the descriptions in the next section as a guide.**

6. **Click on OK to exit the window and save your changes.**

   The DECnet Static Adjacent Hosts List window reappears. The static adjacency you configured is displayed in the list.

7. **Repeat Steps 4 through 6 to add additional static adjacencies.**

DECnet Static Adjacency Parameter Descriptions

Use the following descriptions as a guide when you configure the parameters in the DECnet Static Adjacent Hosts List window (refer to Figure 3-8) and the DECnet Static Adjacency Configuration window (refer to Figure 3-9).

Parameter:	**Adjacency Enable**
Default:	Enable
Options:	Enable | Disable
Function:	Specifies the state of the static adjacency record in the DECnet router's routing tables.
Instructions:	Select Disable to make the static adjacency record inactive in the DECnet routing table; the router will not consider this static adjacency. Select Enable to make this static adjacency record active again. This parameter defaults to Enable when you click on Add in the DECnet Static Adjacent Hosts List window.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.2

Parameter:	**Adjacency Type**
Default:	Area
Options:	Area | Routing IV | Non-Routing IV
Function:	Specifies whether the static adjacency is another router or an end node.
Instructions:	Select Area if the static adjacency is a Level 2 router, select Routing IV if the static adjacency is a Level 1 router, or select Non-Routing IV if the static adjacency is an end node.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.7

Parameter:	**Adjacency Priority**
Default:	None
Range:	0 to 127
Function:	If the static adjacency is another router, this parameter specifies the router's priority for becoming the designated router on the network. The designated router performs additional services for other nodes attached to the circuit. (All these nodes know the address of the designated router.) If you do not choose a designated router, or if you assign two or more routers the same priority, the router with the highest Node ID becomes the designated router by default.
Instructions:	Enter a router priority value from 0 to 127. If you want this node to be the designated router on this circuit, assign it the highest priority value among all routers on the circuit.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.8

Parameter:	**Destination MAC Address**
Default:	None
Options:	Any valid MAC address
Function:	Specifies the 48-bit Ethernet address of the static adjacency.
Instructions:	Enter the MAC address as a 12-digit hexadecimal number.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.9

Parameter:	**Adjacent Area ID**
Default:	None
Range:	1 to 63
Function:	Specifies the Area ID portion of the static adjacency's DECnet address.
Instructions:	Enter the Area ID assigned to the static adjacency.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.1.3

Parameter:	**Adjacent Node ID**
Default:	None
Range:	1 to 1023
Function:	Specifies the Node ID portion of the static adjacency's DECnet address.
Instructions:	Enter the Node ID assigned to the static adjacency.
MIB Object ID:	1.3.6.1.4.1.18.3.5.2.7.1.4

Editing Static Adjacency Parameters

To edit the parameters for an existing static adjacency:

1. **Select Circuits > Edit Circuits in the Configuration Manager window (refer to Figure 3-1).**

   The Circuit List window appears (refer to Figure 3-6), listing the circuits configured on the router.

2. **Select a DECnet circuit from this list and click on Edit.**

   The Circuit Definition window for the circuit appears (refer to Figure 3-7).

3. **Select Protocols > Edit DECnet IV > Static Adjacencies in the Circuit Definition window.**

   The DECnet Static Adjacent Hosts List window appears (refer to Figure 3-8).

4. **Click on the static adjacent host whose parameters you want to modify.**
5. **Edit the parameters you want to change.**
6. **Click on Apply to implement your changes.**
7. **Repeat Steps 4 through 6 to edit additional static adjacencies.**
8. **Click on Done to exit the window.**

Deleting a Static Adjacency

To delete a static adjacency:

1. **Select Circuits > Edit Circuits in the Configuration Manager window (refer to Figure 3-1).**

   The Circuit List window appears (refer to Figure 3-6), listing the circuits configured on the router.

2. **Select a DECnet circuit from this list and click on Edit.**

   The Circuit Definition window for the circuit appears (refer to Figure 3-7).

3. **Select Protocols > Edit DECnet IV > Static Adjacencies in the Circuit Definition window.**

   The DECnet Static Adjacent Hosts List window appears (refer to Figure 3-8).

4. **Click on the static adjacent host you want to delete.**
5. **Click on Delete to delete the static adjacency.**
6. **Repeat Steps 4 and 5 to delete additional static adjacencies.**
7. **Click on Done to exit the window.**

Configuring the DECnet IV to V Transition

You create, edit, and delete the DECnet IV to V Transition from the Configuration Manager window. The following sections describe how to perform each of these tasks.

Note: You must configure both DECnet Phase IV and OSI on each network interface participating in a DECnet IV to V Transition. If you have a mixed Phase IV and Phase V network, refer to Configuring OSI Services for details on configuring OSI.

Creating the DECnet IV to V Transition

To create the DECnet IV to V Transition:

1. **In the Configuration Manager window (refer to Figure 3-1), select Protocols > OSI > Create DECnet IV to V Transition.**

   The Create DECnet IV to V Transition Parameters window appears (Figure 3-10).

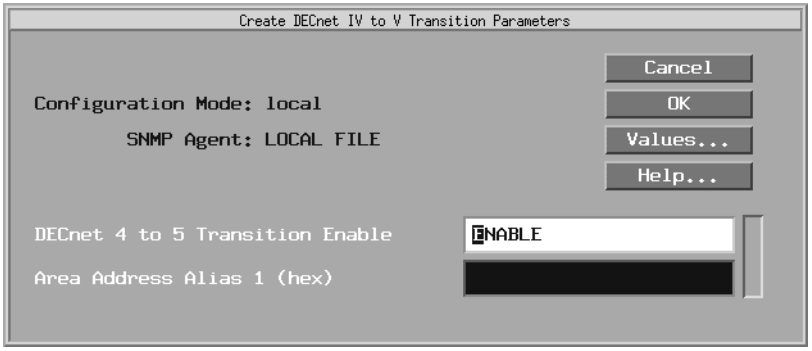

Figure 3-10. Create DECnet IV to V Transition Parameters Window

2. **Edit the parameters, using the following descriptions as a guide.**
3. **Click on OK to save your changes and exit the window.**

DECnet IV to V Transition Parameter Descriptions

Use the following descriptions as a guide when you configure the parameters in the Create DECnet IV to V Transition Parameters window (refer to Figure 3-10).

Parameter:	**DECnet 4 to 5 Transition Enable**
Default:	Enable
Options:	Enable | Disable
Function:	Enables or disables the DECnet IV to V Transition.
Instructions:	To enable the transition, select Enable. To turn this feature off, select Disable. After you enable the DECnet IV to V Transition feature, if you select Protocols > OSI, you will see that the edit and delete options are available.
MIB Object ID:	1.3.6.1.4.1.18.3.5.6.12.2

Parameter:	**Area Address Alias 1 (hex)**
Default:	None
Options:	Any valid area address
Function:	Assigns the first area address alias to the router. The alias is a different area address that is assigned to the same router. For the DECnet IV to V Transition feature, the area address alias defines the Phase IV prefix and Phase IV area fields of the Phase IV-compatible address. (Refer to "Translating DECnet Addresses" in Chapter 1.)
Instructions:	Enter the area address alias in hexadecimal format. For the DECnet IV to V Transition feature, enter the Phase IV prefix (from 1 to 9 bytes), followed by 2 bytes of the Phase IV area address.
MIB Object ID:	1.3.6.1.4.1.18.3.5.6.1.17

Note: Refer to Chapter 2 of *Configuring OSI Services* for more information about the area address alias.

Editing the DECnet IV to V Transition Parameters

To edit the DECnet IV to V Transition parameters, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Protocols > OSI > Edit DECnet IV to V Transition.**

   The Edit DECnet IV to V Transition Parameters window appears. This window contains the same fields as the Create DECnet IV to V Transition Parameters window (refer to Figure 3-10).

2. **Edit the parameters, using the descriptions in the previous section as a guide.**

3. **Click on OK to implement your changes and exit the window.**

Deleting the DECnet IV to V Transition

To delete the DECnet IV to V Transition feature, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Protocols > OSI > Delete DECnet IV to V Transition.**

   A window pops up and prompts:

   ```
   Do you REALLY want to delete OSI DECnet IV to V Transition?
   ```

2. **Click on OK.**

   The Configuration Manager window appears. The DECnet IV to V Transition feature is no longer configured on the router.

Deleting DECnet from the Router

To delete the DECnet routing protocol from all router circuits on which it is currently enabled, begin at the Configuration Manager window (refer to Figure 3-1) and proceed as follows.

1. **Select Protocols** > **DECnet IV** > **Delete DECnet IV.**

   A window pops up and prompts

   ```
   Do you REALLY want to delete DECnet IV?
   ```

2. **Click on OK.**

   The Configuration Manager window appears. DECnet is no longer configured on the router.

If you examine the Configuration Manager window, you see that the connectors for circuits on which DECnet was the only protocol enabled are no longer highlighted. You must reconfigure the circuits for these connectors. Refer to *Configuring Routers* for details on configuring circuits.

Appendix A
DECnet Parameter Default Settings

Tables A-1 through A-5 show the default settings for the DECnet Phase IV and DECnet Phase IV to V Transition parameters in Site Manager. Use the Configuration Manager to edit any of the default settings listed here (refer to Chapter 3).

Table A-1. DECnet Phase IV Global Parameters

Parameter	Default
Route Enable	Enable
Route Level	Level 1 + Level 2
Level 1 Only Area	1
Broadcast Route Timer	180 s
Route Max Addr	1023
Max Broadcast Non Routers	64
Max Broadcast Routers	32
Max Circuits	1024
Max Cost	1022
Max Hops	30
Max Visits	63
Area Max Cost	1022
Area Max Hops	30
Max Area	63

Table A-2. DECnet Phase IV Interface Parameters

Parameter	Default
Enable	Enable
Route Level	Level 1 + Level 2
Area ID	None
Node ID	None
Cost	10
Hello Timer	15 s
Max Routers	33
Router Priority	64
End Nodes MAC	None
End Routers MAC	None
Area Routers MAC	None
Node Hello	Enable
Router Hello	Enable
Level 1 Topology Update	Enable
Level 2 Topology Update	Enable

Table A-3. DECnet Static Route Parameters

Parameter	Default
Static Route Enable	Enable
Route Type	Level 2
Route Cost	10
Destination Area ID	None
Destination Node ID	None
Next Hop Area ID	None
Next Hop Node ID	None

Table A-4. DECnet Static Adjacency Parameters

Parameter	Default
Adjacency Enable	Enable
Adjacency Type	Area
Adjacency Priority	None
Destination MAC Address	None
Adjacent Area ID	None
Adjacent Node ID	None

Table A-5. DECnet IV to V Transition Parameters

Parameter	Default
DECnet 4 to 5 Transition Enable	Enable
Area Address Alias 1 (hex)	None

Index

A

accessing DECnet parameters, 3-2

adding
- static adjacency, 3-24 to 3-27
- static route, 3-18

Adjacency Enable parameter, 3-27

Adjacency Priority parameter, 3-28

Adjacency Type parameter, 3-27

adjacency. *See* static adjacency

Adjacent Area ID parameter, 3-28

Adjacent Node ID parameter, 3-29

Area Address Alias 1 parameter, 3-32

Area ID
- and DECnet Phase V address mapping, 1-10
- defined, 1-2
- specifying
  - for an interface, 2-3, 3-12
  - for static adjacency, 3-27
  - for static route, 3-21
  - globally, 3-5

area ID, 3-5

Area ID parameter, 2-3, 3-12

Area Max Cost parameter, 3-8

Area Max Hops parameter, 3-8

Area Routers MAC parameter, 3-16

B

Bay Networks
- CompuServe forum, xx
- Customer Service FTP, xix
- home page on World Wide Web, xix
- InfoFACTS service, xxi

Bay Networks *(continued)*
- publications, ordering, xv
- support programs, xviii
- Support Source CD, xx
- Technical Response Center, xvii, xxi
- technical support, xvii

Broadcast Route Timer parameter, 3-5

C

CompuServe, Bay Networks forum on, xx

Connectionless Network Protocol (CLNP) packet (DECnet phase V), 1-10

Cost parameter, 3-13

Customer Service FTP, xix

customer support. *See* getting help

D

DECnet
- configuration parameters. *See* individual parameter names
- defaults, A-1
- deleting from the router, 3-34
- enabling on the router, 2-2
- Level 1 routing, 1-4
- Level 2 routing, 1-4
- listening process for, 1-6
- overview of, 1-1
- routing process for, 1-5 to 1-9
- update process for, 1-5

DECnet 4 to 5 Transition Enable parameter, 3-32

DECnet architectural constant, 1-10

DECnet circuit costs
assigning
for interface, 3-13
for router, 3-7, 3-8
for static route, 3-21
calculating the least-cost path, 1-6, 1-7
DECnet Hello messages
disabling, 1-16, 3-17
purpose of, 1-6
DECnet hops
maximum number of, 3-8
DECnet IV to V Transition, 1-10 to 1-14
advertising routes for, 1-13
configuring, 3-30
creating, 3-31
deleting, 3-33
editing, 3-31
parameter descriptions, 3-31
transition strategy for, 1-13 to 1-14
translating data packets for, 1-11 to 1-14
translating DECnet network layer addresses for, 1-10 to 1-11
DECnet Phase IV
data packet, 1-10, 1-11
network organization for, 1-1
parameters
defaults for, A-1
Node ID, 2-3
DECnet Phase V, 1-3, 1-14
address for, 1-4, 1-10
advertising routes for, 1-13
CLNP packet, 1-10, 1-11
link state packets, 1-13
network organization for, 1-3
DECnet services, 1-4 to 1-9
defaults for DECnet parameters, A-1 to A-3
deleting
DECnet from the router, 3-34
DECnet IV to V Transition, 3-33
static adjacencies, 3-30
static routes, 3-23
designated router, 1-9
specifying, 3-14
Destination Area ID parameter, 3-21
Destination MAC Address parameter, 3-28
Destination Node ID parameter, 3-21
disabling Hello messages, 1-16, 3-16, 3-17

E

editing
DECnet global parameters, 3-3
DECnet interface parameters, 3-9
DECnet IV to V Transition parameters, 3-31
static adjacency parameters, 3-29
static route parameters, 3-19
editing parameters, 3-1
Enable parameter, 3-11
enabling DECnet on an interface, 2-2
End Nodes MAC parameter, 3-15
End Routers MAC parameter, 3-15

F

Frame Relay multicasting address, 3-15

G

getting help
from a Bay Networks Technical Response Center, xxi
from the Support Source CD, xx
through CompuServe, xx
through Customer Service FTP, xix
through InfoFACTS service, xxi
through World Wide Web, xix

H

Hello messages
disabling, 1-16, 3-16, 3-17
purpose of, 1-6
Hello Timer parameter, 3-13

high-order value, 1-10
hops
  maximum number of, 1-7, 3-7, 3-8

I

InfoFACTS service, xxi
interarea routing, 1-4
intra-area routing, 1-4

L

least-cost path
  calculating, 1-6
Level 1 and Level 2 routing
  configuring
    for interface, 3-11
    for router, 3-4
  defined, 1-4
Level 1 Only Area parameter, 3-5
Level 1 Only routing
  configuring
    area for router, 3-5
    for interface, 3-11
    for router, 3-4
  defined, 1-4
Level 1 topology update packets, 1-13, 1-14
Level 1 Topology Update parameter, 3-17
Level 2 backbone, 1-14
Level 2 topology update packets, 1-14
Level 2 Topology Update parameter, 3-17
link state packets, 1-13

M

Max Area parameter, 3-9
Max Broadcast Non Routers parameter, 3-6
Max Broadcast Routers parameter, 3-6
Max Circuits parameter, 3-6
Max Cost parameter, 3-7
Max Hops parameter, 3-7
Max Routers parameter, 3-14
Max Visits parameter, 3-8
maximum transmission unit (MTU), 1-11

N

Next Hop Area ID parameter, 3-22
Next Hop Node ID parameter, 3-22
Node Hello parameter, 3-16
Node ID
  configuring
    for interface, 2-3, 3-12
  defined, 1-2
nodes
  maximum number of, 1-1
  types of, 1-1
NSAP (Network Service Access Point) address (DECnet Phase V), 1-4, 1-10

O

Open Systems Interconnection (OSI), 1-3
Open Systems Interconnections (OSI), 3-30

P

parameters
  defaults, A-1
parameters. *See also* individual parameter names
Phase IV prefix, 1-10
Phase IV-compatible address, 1-10

R

Route Cost parameter, 3-21
Route Enable parameter, 3-4
Route Level parameter, 3-4, 3-11
Route Max Addr parameter, 3-5
Route Type parameter, 3-20

Router Hello parameter, 1-17, 3-17
Router Priority parameter, 3-14

S

Site Manager, 3-2
SMDS group address, 3-15, 3-16
static adjacency
  adding, 3-24 to 3-27
  configuring, 3-23
  defined, 1-16
  deleting, 3-30
  editing, 3-27
  parameter descriptions for, 3-27 to 3-29
static route
  adding, 3-18
  configuring, 3-18
  defined, 1-14
  deleting, 3-23
  editing, 3-23
  parameter descriptions for, 3-19 to 3-22
Static Route Enable parameter, 3-20
Support Source CD, xx
System ID, 1-10

W

wide area network, 1-14
World Wide Web, Bay Networks home page on, xix